



ROMB S.A.

+48 67 265 04 12-19
bok.romb@grupakety.com
ul. Kujawska 10 E,
77-400 Złotów, Poland




INSTRUCTION

HARDWARE MAINTENANCE

Safety and quality assurance



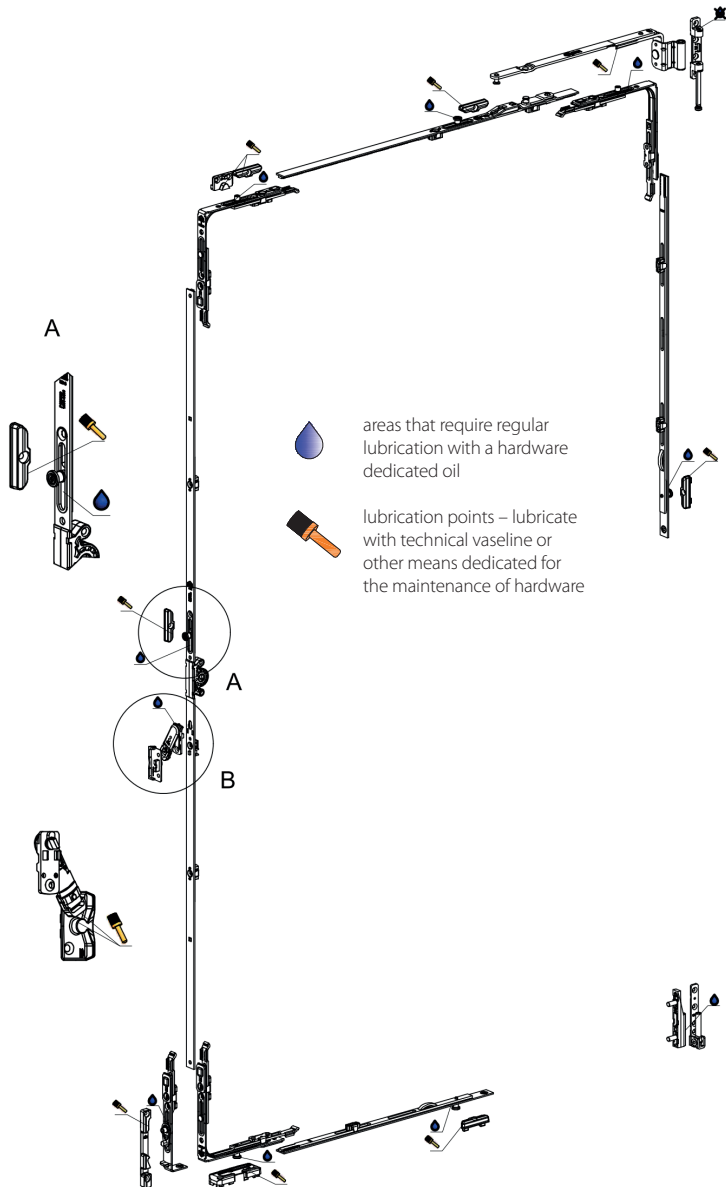

NOTE:

The diagram does not correspond exactly to the distribution of hardware in the window.

Number of locking points varies depending on the size of the window. It is not necessary to remove the sash to perform hardware maintenance. All movable elements of the hardware marked with drops should be lubricated with hardware dedicated oil at least once a year.

To ensure the liquidity of deadbolts and striker elements cooperation, working edges of the strikers should be lubricated with a special hardware maintenance lubricant or with technical vaseline at least once a year.

It is not acceptable to perform hardware maintenance using lubricants which contain resins or acids.